

SOLID SURFACE BATHTUB Installation Guide

Freestanding Bathtub



Instruction Manual

Important:

Before installation, please read the following guide instructions and observe all local plumbing and building codes.

- Check the area where the bathtub will be installed and ensure it is leveled and structurally sound.
- Please unwrap the packet firstly and check if the tub has been damaged during transportation.
- Before starting installation, please place the bathtub on a flat and safe area.
- We recommend the tub be installed by a qualified, licensed professional.
- Due to its weight and bulk, pls install the tub with the help of other 2 or more person. It is recommended to use an activity belt and rubber gloves to protect the tub while installation.

Cleaning and Maintenance

Matte Finish

Thanks to its durable and non-porous Stone Resin material, the tub resistant to scratches, stains and discoloration. It is very easy to maintain.

- Clean with cloth, mild soap, and warm water.
- Do not use strong liquid or abrasive cleaners.
- Do not use acid, alkali or ammonia cleaners.
- Better do not expose the surface of this tub to hair dye or nail varnish as this may cause stains.


Warm Tips: If your tub develops minor scratches, you could removed them by scrubbing gently with the fine grit sand paper, a soft brush or a non-abrasve sponge and a mild abrasive cream cleaner.

Glossy Finish


- Clean with cloth, mild soap, and warm water.
- Do not use strong liquid or abrasive cleaners.
- Do not use acid, alkali or ammonia cleaners.
- Dry using a dean dry cloth.

Caution: This bathtub is heavy, get help lifting and moving this tub.



Tools Needed:

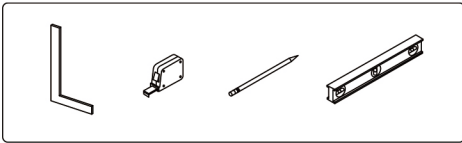

Product List:


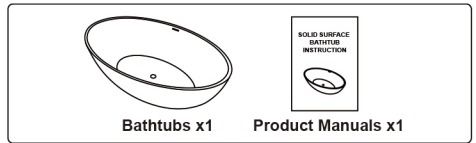


How to Installation :

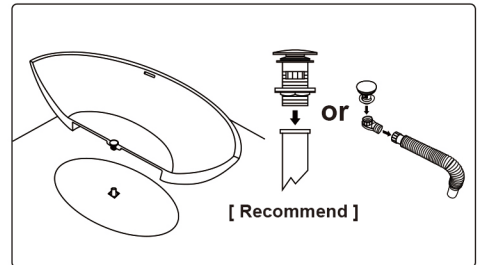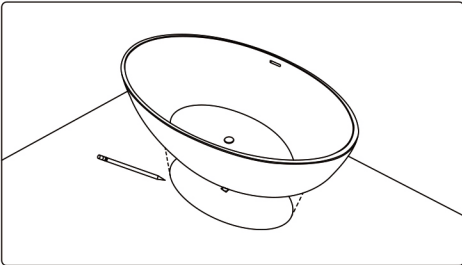


1. Set the tub in its exact position, then mark the floor through the drain opening to prepare for hose connection.

2. Put on the rubber drain gasket, and then tighten the screws.

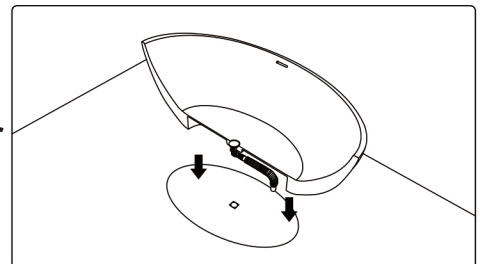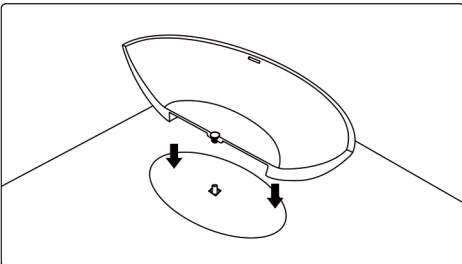

3. Insert the other side of the drain pipe into the drain hole.

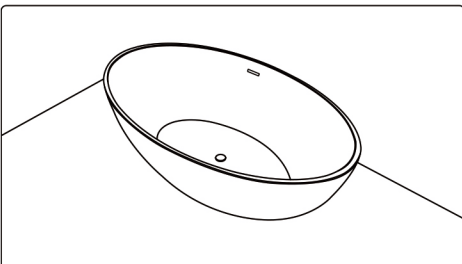


4. Place the bathtub smoothly in the determined position and then complete the installation.

How to Maintain Solid Surface



1. Water stain, blot

- Clean with damp cloth and wipe dry.
- Most dirt and residue can be rinsed with soapy water or mild ammonia cleaner and wiped dry.
- If the residue still on it, pls repeat the second step again. If the residue cannot be removed by soapy water or cleaner, please try to remove it by sandpaper.
- Occasionally wipe surface with a household bleach dilution (50 parts water/1 part bleach). Rinse basin or bathtub thoroughly with water and wipe dry.
- Do not use abrasive cleaners or cleaners containing strong acids, alkalis or strong ammonia to remove stains.

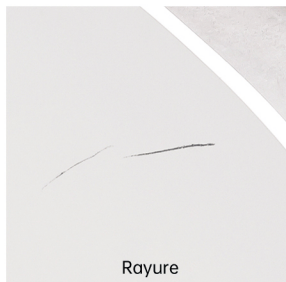

2. Scratch, stubborn stain


Normally, stone resin (Matte Finish) can be repaired if damaged. Pls follow these steps to prevent any permanent damage to the stone resin:

- 1. Avoid exposing stone resin to strong chemicals, such as nail polish, nail polish remover, hair dyes etc. If contact occurs, quickly flush the surface with water. Or try to remove the stain with sandpaper (Matte Finish).
- 2. Do not cut directly on solid surface.

How to remove minor cuts or scratches with sandpaper?

Stone resin is completely renewable.

1. Remove the scratch with fine grit sanding pad (approximately 1000 grmt). Rub over scratch in a straight line(not circular motion)to remove it.
- Periodically switch rubbing direction 90°. Be sure the entire scratch is removed and shape appropriately to match the surrounding area.

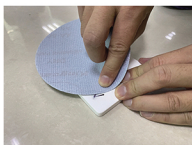

2. If the 1000 grmt sandpaper cannot remove it, try the next heaviest grit sanding pad. To minimize dust during sanding, wet the surface. Rinse pad periodically to clean residue.
- Clean surface with water. Select the next heaviest grit until desired level is achieved. For matte, you should be ending at about 600 grit.



Solid Surface Freestanding Bathtub

www.inyouths.com

The Team at Inyouths

Tel: +1(213) 672 0829

E-mail: support@inyouths.com